

DJI Ronin RavenEye Image Transmission System Compatibility List

Brand	Model	Multi-Camera Control Cable	HDMI Cable	Notes	Camera Firmware Version
Canon	1DX3	Multi-Camera Control Cable (USB-C)	Ronin Mini-HDMI to Mini-HDMI Cable		v1.1.0
	1DX2	Multi-Camera Control Cable (Micro-USB)	Ronin Mini-HDMI to Mini-HDMI Cable		v1.1.6
	EOS R6	Multi-Camera Control Cable (USB-C)	Ronin Mini-HDMI to Micro-HDMI Cable (20 cm)	1. When the camera is in the video mode, set the HDMI display as camera + HDMI, and the camera screen and HDMI can be displayed normally. 2. When the camera is in the photo mode, there is no HDMI display setting in the setting options, the camera screen does not display pictures, and the HDMI output is normal.	v1.0.0
	EOS R5	Multi-Camera Control Cable (USB-C)	Ronin Mini-HDMI to Micro-HDMI Cable (20 cm)	1. When the camera is in the video mode, set the HDMI display as camera + HDMI, and the camera screen and HDMI can be displayed normally. 2. When the camera is in the photo mode, there is no HDMI display setting in the setting options, the camera screen does not display pictures, and the HDMI output is normal.	v1.0.0
	EOS R	Multi-Camera Control Cable (USB-C)	Ronin Mini-HDMI to Mini-HDMI Cable		v1.6.0
	EOS RP	Multi-Camera Control Cable (USB-C)	Ronin Mini-HDMI to Mini-HDMI Cable		v1.4.0
	G7X3	Multi-Camera Control Cable (USB-C)	Ronin Mini-HDMI to Micro-HDMI Cable (20 cm)		v1.2
	EOS M50	Multi-Camera Control Cable (Micro-USB)	Ronin Mini-HDMI to Micro-HDMI Cable (20 cm)		v1.0.2
	EOS 90D	Multi-Camera Control Cable (Micro-USB)	Ronin Mini-HDMI to Mini-HDMI Cable		v1.0
	EOS 5D4	Multi-Camera Control Cable (Micro-USB)	Ronin Mini-HDMI to Mini-HDMI Cable	1. In the video mode, the camera's HDMI display is set to screen + camera display, the camera and HDMI output can display the preview screen at the same time, and the camera screen does not display the preview screen in the photo mode	v1.2.1
	EOS 200D II	Multi-Camera Control Cable (Micro-USB)	Ronin Mini-HDMI to Mini-HDMI Cable		v1.0.0
	EOS 77D	Multi-Camera Control Cable (Mini-USB)	Ronin Mini-HDMI to Mini-HDMI Cable		/
	EOS 800D	Multi-Camera Control Cable (Mini-USB)	Ronin Mini-HDMI to Mini-HDMI Cable		v1.0.1
	EOS 6D II	Multi-Camera Control Cable (Mini-USB)	Ronin Mini-HDMI to Mini-HDMI Cable		v1.0.4
	EOS 80D	Multi-Camera Control Cable (Mini-USB)	Ronin Mini-HDMI to Mini-HDMI Cable		v1.0.2
	EOS 5D3	Multi-Camera Control Cable (Mini-USB)	Ronin Mini-HDMI to Mini-HDMI Cable	1. In the video mode, the camera's HDMI display is set to screen + mirroring, the camera and HDMI output can display the preview screen at the same time, and the camera screen does not display the preview screen in the photo mode	v1.2.3
Sony	A7M3	Multi-Camera Control Cable (Sony Multi)	Ronin Mini-HDMI to Micro-HDMI Cable (20 cm)		v3.01
	A6600	Multi-Camera Control Cable (Sony Multi)	Ronin Mini-HDMI to Micro-HDMI Cable (20 cm)		v1.00
	A9	Multi-Camera Control Cable (Sony Multi)	Ronin Mini-HDMI to Micro-HDMI Cable (20 cm)		v6.0
	A6400	Multi-Camera Control Cable (Sony Multi)	Ronin Mini-HDMI to Micro-HDMI Cable (20 cm)		v1.00
	A7R 4	Multi-Camera Control Cable (Sony Multi)	Ronin Mini-HDMI to Micro-HDMI Cable (20 cm)		v1.10
	A7R3	Multi-Camera Control Cable (Sony Multi)	Ronin Mini-HDMI to Micro-HDMI Cable (20 cm)		v3.10
	A7S2	Multi-Camera Control Cable (Sony Multi)	Ronin Mini-HDMI to Micro-HDMI Cable (20 cm)		v2.20
	A7M2	Multi-Camera Control Cable (Sony Multi)	Ronin Mini-HDMI to Micro-HDMI Cable (20 cm)		v4.01
	A7S	Multi-Camera Control Cable (Sony Multi)	Ronin Mini-HDMI to Micro-HDMI Cable (20 cm)		v3.20
	A7R2	Multi-Camera Control Cable (Sony Multi)	Ronin Mini-HDMI to Micro-HDMI Cable (20 cm)		v4.00
	A6100	Multi-Camera Control Cable (Sony Multi)	Ronin Mini-HDMI to Micro-HDMI Cable (20 cm)		v1.00
	A6300	Multi-Camera Control Cable (Sony Multi)	Ronin Mini-HDMI to Micro-HDMI Cable (20 cm)		v2.01
	A6500	Multi-Camera Control Cable (Sony Multi)	Ronin Mini-HDMI to Micro-HDMI Cable (20 cm)		v1.02
Nikon	Z7	Multi-Camera Control Cable (USB-C)	Ronin Mini-HDMI to Mini-HDMI Cable		v3.0
	Z6	Multi-Camera Control Cable (USB-C)	Ronin Mini-HDMI to Mini-HDMI Cable		v3.0
	Z50	Multi-Camera Control Cable (Micro-USB)	Ronin Mini-HDMI to Micro-HDMI Cable (20 cm)		v1.0
	D780	Multi-Camera Control Cable (USB-C)	Ronin Mini-HDMI to Mini-HDMI Cable	1. In the video mode, you need to click the camera LV button twice to display the picture normally	v1.01
	D6	Multi-Camera Control Cable (USB-C)	Ronin Mini-HDMI to Mini-HDMI Cable	1. Connect the HDMI cable first, then the USB-C cable, then the image transmission can be used normally	v1.00
	D5	Multi-Camera Control Cable (Micro-USB)	Ronin Mini-HDMI to Mini-HDMI Cable	1. In the video mode, you need to click the camera LV button twice to display the picture normally	v1.30
	D850	Multi-Camera Control Cable (Micro-USB)	Ronin Mini-HDMI to Mini-HDMI Cable	1. Connect the HDMI cable first, then the USB-C cable, then the image transmission can be used normally	v1.10
FUJIFILM	X-H1	Multi-Camera Control Cable (Micro-USB)	Ronin Mini-HDMI to Micro-HDMI Cable (20 cm)		v2.01
		Multi-Camera Control Cable (RSS-F)	Ronin Mini-HDMI to Micro-HDMI Cable (20 cm)		
	X-T2	Multi-Camera Control Cable (Micro-USB)	Ronin Mini-HDMI to Micro-HDMI Cable (20 cm)		v4.30
		Multi-Camera Control Cable (RSS-F)	Ronin Mini-HDMI to Micro-HDMI Cable (20 cm)		
	X-E3	Multi-Camera Control Cable (RSS-F)	Ronin Mini-HDMI to Micro-HDMI Cable (20 cm)		v1.22
	X-T20	Multi-Camera Control Cable (Micro-USB)	Ronin Mini-HDMI to Micro-HDMI Cable (20 cm)		v4.3
	X-T20	Multi-Camera Control Cable (RSS-F)	Ronin Mini-HDMI to Micro-HDMI Cable (20 cm)		v1.0
	X-T4	Multi-Camera Control Cable (USB-C)	Ronin Mini-HDMI to Micro-HDMI Cable (20 cm)	1. In 4K resolution, HDMI output information needs to be set to on	v1.0
		Multi-Camera Control Cable (RSS-F)	Ronin Mini-HDMI to Micro-HDMI Cable (20 cm)		
X-T3	Multi-Camera Control Cable (USB-C)	Ronin Mini-HDMI to Micro-HDMI Cable (20 cm)		v3.10	
	Multi-Camera Control Cable (RSS-F)	Ronin Mini-HDMI to Micro-HDMI Cable (20 cm)			
Panasonic	GH5	Multi-Camera Control Cable (USB-C)	Ronin Mini-HDMI to HDMI Cable (20 cm)	1. Due to the camera firmware, after connecting the USB-C cable and connecting the image transmission at the same time, the camera screen does not display the image	v2.6
	GH5s	Multi-Camera Control Cable (USB-C)	Ronin Mini-HDMI to HDMI Cable (20 cm)	1. Due to the camera firmware, after connecting the USB-C cable and connecting the image transmission at the same time, the camera screen does not display the image	v1.2
	S1H	Multi-Camera Control Cable (USB-C)	Ronin Mini-HDMI to HDMI Cable (20 cm)	1. Due to the camera firmware, after connecting the USB-C cable and connecting the image transmission at the same time, the camera screen does not display the image	v1.1
	S1	Multi-Camera Control Cable (USB-C)	Ronin Mini-HDMI to HDMI Cable (20 cm)	1. Due to the camera firmware, after connecting the USB-C cable and connecting the image transmission at the same time, the camera screen does not display the image	v1.3
	G9	Multi-Camera Control Cable (Micro-USB)	Ronin Mini-HDMI to HDMI Cable (20 cm)	1. Due to the camera firmware, after connecting the USB-C cable and connecting the image transmission at the same time, the camera screen does not display the image	v2.0
	G95	Multi-Camera Control Cable (RSS-P)	Ronin Mini-HDMI to Micro-HDMI Cable (20 cm)		v0.2
	GH4	Multi-Camera Control Cable (RSS-P)	Ronin Mini-HDMI to Micro-HDMI Cable (20 cm)		v2.6
BMD	BMPCC 4K	Multi-Camera Control Cable (USB-C)	Ronin Mini-HDMI to HDMI Cable (20 cm)		v6.6