
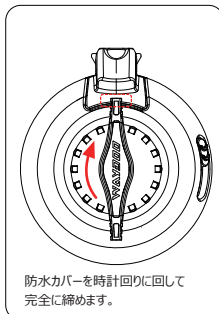
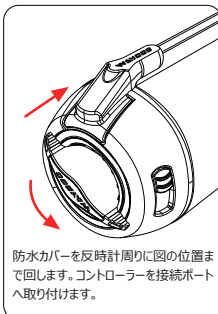
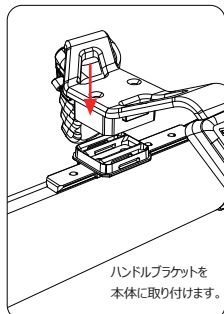


subnado

クイックスタートガイド

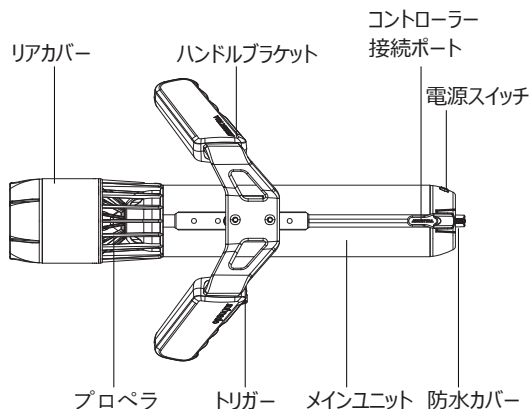

注意：コントローラは乾燥した状態で取り付けてください。

電源やUSBポートが濡れている場合には、ポートを乾かしてから取り付けてください。


アドバイス

充電が完了すると、本体からピープ音が鳴ります。

完了後はケーブルを抜いてください、接続したままではバッテリーの劣化を早めます。

充電時間

10W 充電器：約10時間	18W-24W 充電器：約7時間
36W 充電器：約3.5時間	45W 充電器：約3時間
60W-66W 充電器：約2時間	100W 充電器：約1.2時間

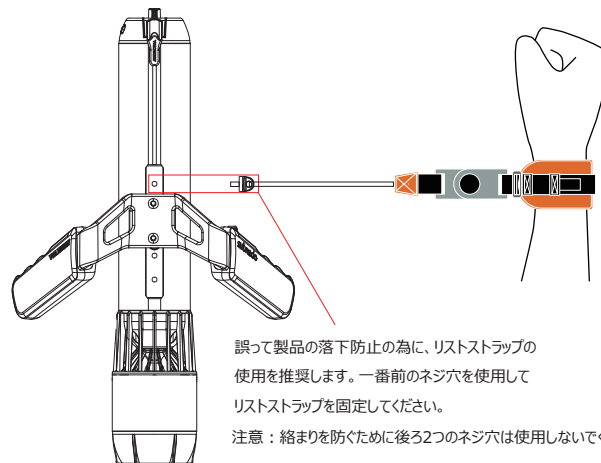

Subnadoの使用方法

1. 電源をいれ、電池残量を確認します。（詳細は、ユーザーマニュアル P.12 を参照ください）
2. トリガーを素早く2回押して、ローギア・ハイギアを切り替えます。

素早く3回押すと、スーパーギアになります、ピープ音をよく聞いてください。

ローギア（1回）、ハイギア（2回）、スーパーギア（3回）

（電池残量：37.5%未満の場合、スーパーギアにはなりません）

注意：スーパーギアは1分間のみ使用できます、再度使用の際には、トリガーを3回押してスーパーギアを起動してください。

注意：使用後はバッテリー寿命の為に電源をオフにしてください。

クルーズモードについて

クルーズモードでは、トリガーを15秒間押し続けると回転を開始します。

ユーザーがトリガーを離しても、回転し続けます、もう一度、トリガーを押すと止まります。

クルーズモードのON/OFFについて

コントローラのトリガーを押したまま電源を入れます。

注意：既にクルーズモードの場合この操作で解除されます。

注意：速度を変えた状態で、クルーズモードに切り替えることが可能です。

Subnadoの充電方法

1. USB-Cケーブルと対応した充電器で充電します。

（充電器の能力次第で充電速度は変わります。）


2. 防水カバーを開けます。

（水が入らないように下向きで開けてください。）

3. 内部に湿気が無いかを確認してから充電します。





（湿気がある場合には乾燥させてから充電してください。）

注意：塩分がある場合には、真水やアルコールで完全に洗浄してください。

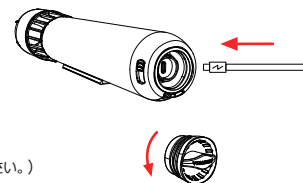

subnado

Quick Start Guide

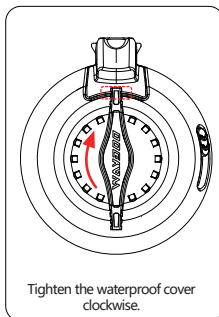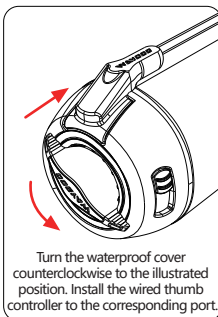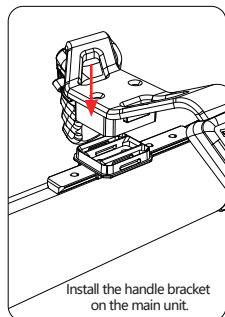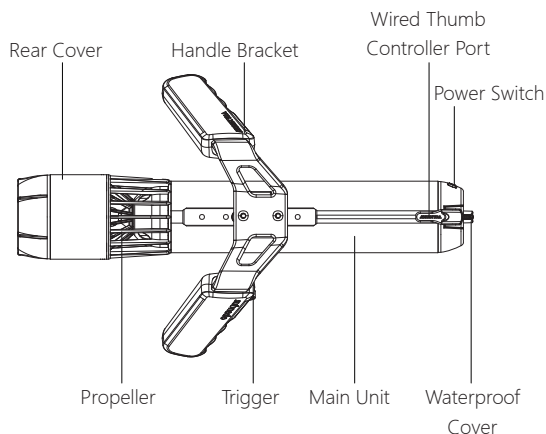


Note: Please install the wired thumb controller in a dry environment. Please dry the port before installation if it is wet.

Tips: The Subnado will beep when charging is complete. Please unplug the charging cable to preserve battery life.

Reference Charging Time:

10W Charger – approx. 10 hours	18-24W Charger – approx. 7 hours
36W Charger – approx. 3.5 hours	45W Charger – approx. 3 hours
60-66W Charger – approx. 2 hours	100W Charger – approx. 1.2 hours

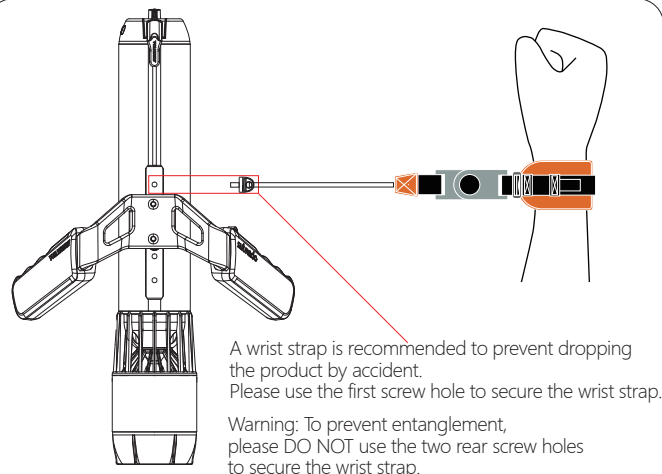

How To Operate the Subnado

1. Power on the Subnado, confirm the power level. (Please refer to Page 12 of the User Manual for details)
2. Quickly press the trigger twice to switch to high or low gear. Quickly press the trigger three times to switch on/off the super gear. The number of beeps indicates the gear that's entered. "One beep" prompts to enter low gear, "two beeps" prompts to enter high gear, and "three beeps" prompts to enter super gear. (When power level is below 37.5%, it can not enter super gear)

Note: The super gear only maintains for 1 minute. To re-enter super gear, please quickly press the trigger 3 times.

Note: Please switch off the Subnado after use to preserve the battery life.

Cruise Mode: Under cruise mode, the propeller rotates after holding the trigger for 15 seconds. A transient speed change indicates the Subnado has entered auto cruise. The propeller continues rotating even when the user releases the trigger. Press the trigger again to exit auto cruise and stop the rotating propeller.

How to turn on/off the constant speed cruise mode: Press and hold the controller trigger, meanwhile turn on Subnado.

Note: If it is already in the constant speed cruise mode, this operation will switch off the constant speed cruise mode.

How to Recharge the Subnado

1. Please select a charger that supports PD protocol to speed up charging.
2. Open the waterproof cover (facing down to prevent water from entering). Check for moisture around and inside the USB-C port. If there is water, it needs to be dried first. If there's saltwater, it must be thoroughly cleaned with fresh water. After confirming that there is no abnormality, insert the USB-C charging cable to start charging.

